Peppers Cable Glands Ltd. Stanhope Road Camberley GU15 3BT UK.


CR-X** Compound-Filled Cable Gland - ASSEMBLY INSTRUCTIONS

Brief Description

The Peppers CR-X** type Compound-filled cable gland is for outdoor use in the appropriate Hazardous Areas with unarmoured cable of any construction, with or without braids or screens, where the braids or screens pass through the compound. It may also be used as a line bushing for terminating flying leads or for the direct inter-connection of associated enclosures. A variant giving electrical continuity to a lead sheath is available. It gives environmental protection to IP66, IP68 (100 metres for 7 days) and Deluge.

Warning

Please read these instructions carefully. These products should not be used in applications except as detailed here or in our datasheets, unless confirmed in writing by Peppers. Peppers take no responsibility for any damage, injury or other consequential loss caused where products are not installed or used according to these instructions. This leaflet is not intended to advise on the selection of product. Further guidance can be found in the standards listed overleaf or the prevailing code of practice. The compound used within this cable gland has application limitations and may be adversely affected by some solvent vapours. If such vapours are likely to be present when the cable gland is in service, necessary precautions should be taken. Peppers Technical Datasheet can be downloaded from our website for further guidance. Prior to use the compound should be stored in its original packaging in a dry area at temperatures between 5°C and 21°C.

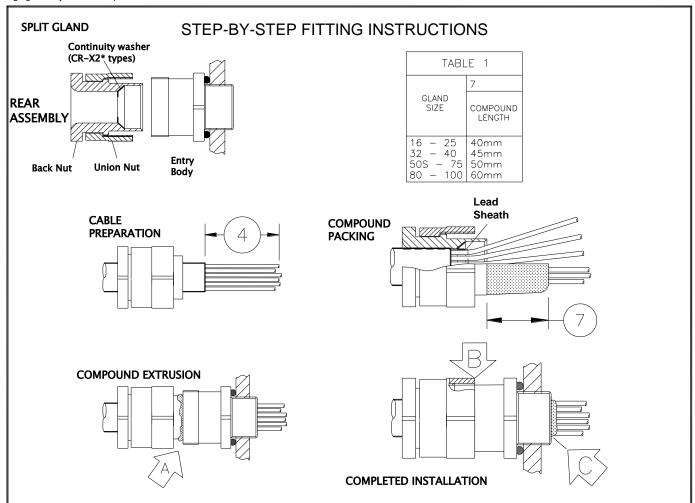

STEP-BY-STEP FITTING INSTRUCTIONS

- 1 Split gland as shown. Warning. The entry body of this cable gland is coated with a releasing agent to ensure the compound form can be inspected after curing. The entry body should not be treated with any lubricant or be exposed to any solvents. The internal bore of the entry body must not be damaged. Any handling during the course of normal installation will not affect the operation of the releasing agent.
- 2 Fit Entry Body, allowing for any installation accessories, and fully engage the thread into the equipment. Hand-tighten, then suitably secure with a wrench. Further guidance can be found in Peppers document CT0030 which can be found on our website.
- 3 Slide Rear onto cable as shown.

4 CABLE PREPARATION

Strip jacket so that cores are fully exposed in the compound chamber, length to suit installation. Lead sheath must be cut to push through the continuity washer. Remove protective foils, and any cords/fillers from around and between the cores. Take care not to cut the insulating sleeves of the cores. Pigtail and sleeve any screens to be passed through compound.

HEALTH AND SAFETY WARNING The resin used in the compound can cause eye and skin irritation. For your personal protection, wear the gloves supplied whilst in contact with the compound. **A COMPREHENSIVE SAFETY DATA SHEET IS AVAILABLE FOR DOWNLOAD FROM OUR WEBSITE**.

- 5 Check compound has not passed its "Use By" date. It has a work life of about 30 minutes at 16-27°C (60-80°F), during which time it can be worked and shaped before it begins to cure. Full cure takes 24 hours at 16-27°C (60-80°F). Lower temperatures will give a longer cure time. E.g. at 3°C (37°F) full cure takes about seven days. It is recommended to mix the putty and pack the fitting at 20°C (68°F). Minimum mixing/packing temperature is 10°C. Minimum curing temperature is 3°C.
- 6 Trim any hardened pieces from ends of stick. Mix the compound by rolling, folding and breaking. Ease mixing by cutting large sticks in half. Fully mixed compound has a uniform colour with no streaks See Figure 1 for correctly mixed compound.
- 7 Support the cable and Rear Assembly, holding them roughly concentric. Any lead sheath is pushed through the continuity washer ensure that contact has been made. Splay out the cores. Starting at the middle, pack small amounts of rolled-out compound between the cores. Re-straighten each core and work outwards until all gaps are filled. Bundle the cores with cord or tape (see figure 2) so they are not disturbed. Pack around the outside of the outer cores to completely fill the Rear Assembly cup. Build up compound around the outside of the cores, with a slight taper & to approximate compound length shown in diagram & Table 1 column 7. Where cable has large quantity of cores ensure they are bundled near to the gland entry thread.
- 8 Pass cores through & push compound into Entry Body until Rear Assembly engages. Remove squeezed out compound at arrow A. Support the Back Nut and screw Union Nut 7 full turns onto Entry Body (arrow B). Ensure that compound emerges at entry thread (arrow C).
- 9 Clean off excess compound from Entry Body to allow withdrawal when cured (arrow C). Cores may be disturbed after 1 hour. Leave to cure for 4 hours when working at 21°C.
 10 To release and pull back joint for inspection, unscrew Union Nut. Using a wrench on the Back Nut, rotate the Back Nut back and forth whilst pulling the rear assembly away from the entry body. This will release the compound from the entry body. Do not over rotate as this may damage cable conductors. Pull the Back Nut and compound out for
- inspection. The compound should appear as in Figure 3 with no gaps, holes or cracks.

 11 Hand-tighten Union Nut to remake joint. Then refer to Table 2 and tighten using wrench to the given amount.
- 12 The equipment should not be energised until the compound has been left to cure for at least 4 hours when working at 21° C. See chart 'Energising Time vs. Temperature' for further guidance.

 Issue: 18
 Doc: PA113

 Date: 15/07/2022
 www.peppers.co.uk
 Page 1 of 2

Peppers Cable Glands Ltd. Stanhope Road Camberley GU15 3BT UK.


CR-X** Compound-Filled Cable Gland - ASSEMBLY INSTRUCTIONS







Gland Tighten Union Nut using wrench up to		Max Diameter over Cores	Max No of Cores	Max Outer Sheath
20S	½-turn	10.4	35	11.7
20	½-turn	12.5	40	14.0
25	½-turn	17.8	60	20.0
32	½-turn	23.5	80	26.3
40	½-turn	28.8	130	32.2
50S	½-turn	34.2	200	38.2
50	½-turn	39.4	400	44.1
63S	½-turn	44.8	400	50.1
63	½-turn	50.0	425	56.0
75S	½-turn	55.4	425	62.0
75	½-turn	60.8	425	68.0
80	¾-turn	64.4	425	72.0
85	¾-turn	69.8	425	78.0
90	¾-turn	75.1	425	84.0
100	¾-turn	80.5	425	90.0

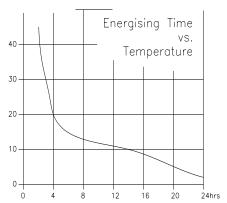

Approvals and Certification

Approvais and octanication	orovais and Certification				
Approval	Certificate Number	Protection Concept / Type			
ATEX	CML 19ATEX1344X / CML 21UKEX1031X	I M2 II 1D 2G Ex db I Mb / Ex db IIC Gb / Ex eb I Mb / Ex eb IIC Gb / Ex ta IIIC Da			
UKCA (SI 2016 No. 1107)	CML 19ATEX4114X / CML 21UKEX4037X	(Ex) II 3G Ex nR IIC Gc			
IECEx	IECEx CML 19.0046X	Ex db I Mb / Ex db IIC Gb / Ex eb I Mb / Ex eb IIC Gb / Ex nR IIC Gc / Ex ta IIIC Da			
CSA	1356011	Ex db IIC Gb / Ex eb IIC Gb / Ex ta IIC Da Class I Zone 1 AEx db IIC Gb / Class I Zone 1 AEx eb IIC Gb / Zone 20 AEx ta IIIC Da CL I Div 2 Gr ABCD / CL II Gr EFG / CL III Type 4X IP86 IP88			
INMETRO	NCC 13.2188 X	Ex db I Mb / Ex db IIC Gb / Ex eb I Mb / Ex eb IIC Gb / Ex nR IIC Gc / Ex ta IIIC Da			
EAC	RU C-GB.BH02.B.00693/18	1Ex d IIC Gb X / 1Ex e IIC Gb X / 2Ex nR IIC Gc X / PB Ex d I Mb / Ex ta IIIC Da X			
UKRAINE	СЦ 18.0322 Х	1 M2 Ex db I Mb / Ex eb I Mb / II 1D 2G 3G Ex db IIC Gb / Ex eb IIC Gb / Ex nR IIC Gc / Ex ta IIIC Da			
CCC	2021312313000407	Ex d I Mb / Ex d IIC Gb / Ex e I Mb / Ex e IIC Gb / Ex nR IIC Gc / Ex tD A20 IP66			
CCoE / PESO	P494321/18 & P494321/20	Ex db I Mb / Ex db IIC Gb / Ex eb I Mb / Ex eb IIC Gb / Ex nR IIC Gc			
ABS	20-LD1944057-PDA	Specified ABS Rules – See certificate			
Lloyd's Register	LR2124442TA	Ex db I Mb / Ex db IIC Gb / Ex eb I Mb / Ex eb IIC Gb / Ex nR IIC Gc / Ex ta IIIC Da			
Russian Maritime	19.00189.278	Ex d I Mb / Ex d IIC Gb / Ex e I Mb / Ex e IIC Gb / Ex ta IIIC Da			

Installation Guidance

Point	Advice					
1	EN/IEC 60079-10	EN/IEC 60079-14	National Electrical Code (NEC 500 – 505)	Canadian Electrical Code (CSA C22.1)		
2	Installation should only be carried out by a competent electrician, skilled in cable gland installation.					
3	Comprehensive details of the compliance standards can be found in the product certificates which are available for download from our website.					
4	NO INSTALLATION SHOULD BE CARRIED OUT UNDER LIVE CONDITIONS.					
5	Threaded entries: the product can be installed directly into threaded entries. Threaded entries should comply with the relevant applicable standards and have a lead-in chamfer to allow for full engagement of the threads. Failure to provide a sufficient lead-in chamfer may lead to ingress sealing issues. For Ex db applications a minimum of 5 fully engaged parallel threads is required. Metric threads are supplied with an o-ring and will maintain IP66 and IP68. Other parallel entry threads will maintain an IP rating of IP64. A Peppers sealing washer should be used to maintain all IP ratings greater than IP64. Whilst Peppers products with tapered threads, when installed into a threaded entry, have been tested to maintain IP66 without any additional sealant, due to the differing gauging tolerances associated with the use of tapered threads it is recommended to use a non-hardening thread sealant if an IP rating higher than IP64 is required.					
6	Clearance holes: these shall be no larger than 0.7mm above the nominal diameter of the external entry thread. The product should be secured with a Peppers locknut and the threads tightened to ensure the cable gland is secure. Where no integral sealing method is provided a Peppers sealing washer should be used to maintain IP ratings. A Peppers serrated washer should be used for additional installation protection. It is recommended that tapered threads are not used in clearance holes.					
7	To maintain the Ingress Protection rating of the product, the entry hole must be perpendicular to the surface of the enclosure. The surface should be sufficiently flat and rigid to support the assembly and make the IP joint. The surface must be clean and dry. The product incorporates a thread run out according to general machining techniques and will not have a full form thread for the entrie length and as such entry threads should have a suitable lead-in other a seal is maintained. Further guidance can be found on Peppers website. It is the user's/installer's responsibility to ensure that the interface between the enclosure and cable gland is suitably sealed for the required application. Any thread sealant used shall be suitable for use in hazardous area locations, be suitable for the temperature range at the point of mounting, shall not contain evaporating solvent and cannot cause corrosion at the threaded interface when used for dissimilar materials.					
8	Where a bonding connection to earth is required a Peppers earth tag should be used. Peppers earth tags have been independently tested to comply with the Category B values given in IEC 62444. Further guidance can be found on Peppers website. Peppers earth tags should be fitted over the external entry thread from either inside or outside the enclosure. If fitted internally they must be secured with a Peppers locknut and optionally a Peppers serrated washer.					
9	Peppers external metric entry threads comply with ISO 965-1 and ISO 965-3 with a 6g tolerance fit. Peppers standard metric thread pitch is 1.5mm for threads up to M75 and 2.0mm for size M80 and above. Alternative thread pitches are available upon request. Peppers external NPT threads are in accordance with ASME B1.20.1 with gauging to clause 8.1. All threads comply with the threaded joint requirements of clause 5.3 from IEC 60079-1. Information on other thread types can be found in the product certificates.					
10	Once installed do not dismantle except for routine inspection. An inspection should be conducted as per IEC/EN 60079-17. After inspection the gland should be re-assembled as instructed, ensuring the compression nut, mid cap and back nut are correctly tightened to ensure the cable is secure.					
11			ole on figure 3) is to prevent compound from extruding ss protection rating of the cable gland.	inside the gland during the assembly process. It has no other		
12	If required an anti-seize lubricant may be used to aid assembly and routine inspection. The lubricant should comply with the prevailing code of practice and care should be taken to ensure no lubricant comes into contact with the cable gland seals as this may impair performance.					

Interpretation of Markings. Markings on the outside of this gland carry the following meanings: Cable Gland Type & Size CR-X-2-a-bbb-ccc-nn; where: -

Π	2 =	Optional Continuity Washer option for lead sheathed cable Main component material B = brass S = stainless steel		Gland size	nn =	Year of manufacture
Π	a =			Entry thread type and size		_

Specific Conditions of Use

- The cable glands shall not be used in enclosures where the temperature, at the point of entry/mounting, is outside of the range -60°C to +135°C.
- The interface seals comply with the requirements of the standards listed in this report when the cable glands are fitted to a representative enclosure having a smooth flat mounting surface. In practice the interface between the male thread of the glands and their associated enclosure cannot be defined, therefore it is the user's responsibility to ensure that the appropriate ingress protection level is maintained at these interfaces.
- The threaded entry component threads without interface o-ring seals installed in an explosive dust atmosphere, within threaded entries, shall only be fitted into enclosures that have
 - parallel entries that will ensure that a minimum of 5 full threads of contact will be maintained, this is in accordance with clause 5.1.2 of EN 60079-31:2014 / IEC 60079-31: 2013,
 - tapered entries that will ensure that a minimum of 3 ½ full threads of contact will be maintained, this is in accordance with clause 5.1.2 of EN 60079-31:2014 / IEC 60079-31: 2013

























